

Table of Contents

01 - 08 English

09 - 16 简体中文

17 产品售后服务条例

 
产品保修卡




- ◆To ensure proper use and trouble-free operation, please carefully read this user manual first.
- ◆For the first use, a full charge is recommended.
- ◆Please use and store the product at room temperature.
- ◆Do not throw and drop the product to avoid damages.
- ◆Do not expose the product to fire, high temperature, direct sunlight, etc.
- ◆Do not use organic solvents or other chemicals to clean the product.
- ◆Do not allow small particles to get into the product.
- ◆Please keep volumes of the speaker moderate to avoid temporary or permanent hearing impairment.
- ◆Do not disassemble the product, or make any modifications to the structure or any parts of it.
- ◆Keep the product out of children's reach.

02 Packing details

English

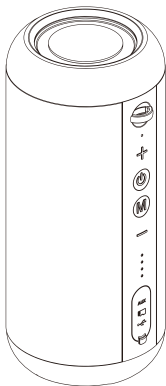

E8-L Speaker 1pc

 

USB Type-C Charging Cable *1



3.5MM Audio cable 1pc



 
User manual



Lanyard 1pc

03 Buttons'function

English

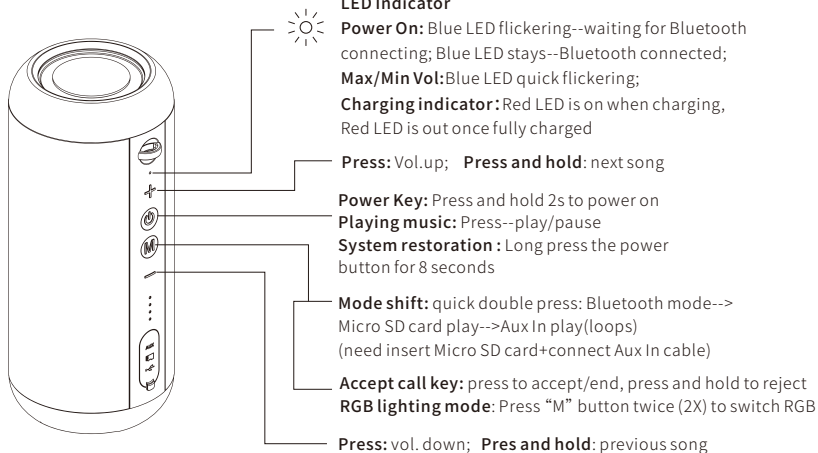


Bluetooth disconnect

Long Press and "M" at the same time can disconnect current device, and E8 goes to discoverable status;
If short press " power key"can reconnect last Bluetooth device

04 Ports'function indicator

 English

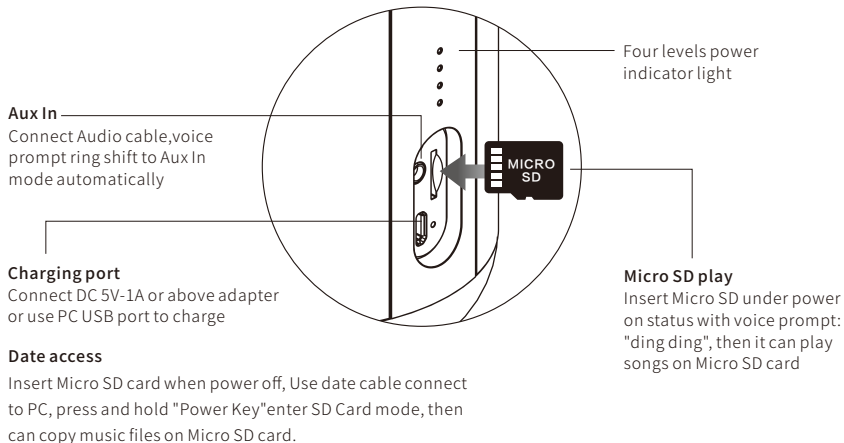

05 Bluetooth connecting

English

1. Power on

Long Press and hold "power key" 2s, with voice prompt ring Bluetooth LED flickering, waiting to connect.

 
2. Bluetooth connect

Go to device's Bluetooth page, find and connect the pairing name: E8-L With a voice "dong dong ding" and the Blue LED stays.

Can connect E8-L automatically once open the device's Bluetooth function in next use

Other tips


If need connect to other Bluetooth device, press and hold "+ -" at the same time disconnect current device, E8 goes to connecting status.

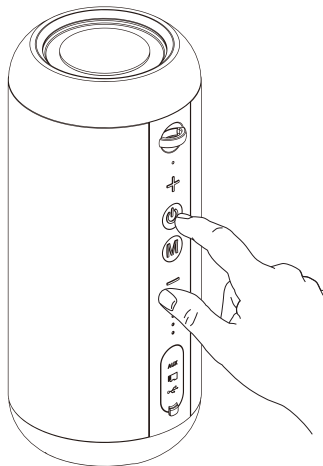

06 True wireless stereo function



 Main Speaker



Slave Speaker

1. TWS connection

Power on both E8-L, and both under disconnect status, choose one of them and short press "+" - "-" at the same time once connected, the other E8-L's LED will stay.

2. Let TWS speakers connect to Bluetooth device

Go to the device's Bluetooth page, and find E8-L to connect, the LED will stay.

3. TWS disconnect

Take each of them, press "+" - "-" at the same time, can disconnect TWS.


Tips:

01. Let 2pcs E8-L connect, for the 1st one you press "+" - "-", this one is the main speaker (left channel), and the other one is the follow speaker (right channel).
02. Only support 2pcs speakers under TWS connection.
03. Will keep precious main/fellow relationship and reconnect TWS for next time use.
04. Once TWS connected, fellow speaker's LED keeps stay, and main speaker's LED indicates the status of play, pause, Bluetooth connection etc.
05. Under TWS, operate each of them, the other one has synchronous operation.

07 Technical Specification

English

Basic	
Type	Bluetooth Speaker
Micro SD card	Support no more than 32G
Power Supply	Built-in 3600mAh Li-ion battery
	DC5V-1A USB adapter
Technical	
Trumpet	2 X 60MM trumpet with 2 X 65MM X-bass radiator
Output	15W THD=10%
Frequency Response	55Hz- 18KHz
BT verion	Bluetooth 5.0
USB	USB2.0, compatible USB 1.1
Music files	MP3, WMA, WAV, APE, FLAC MP3:8Kbps-320Kbps WMA:32Kbps-384Kbps WAV:32Kbps-1414Kbps

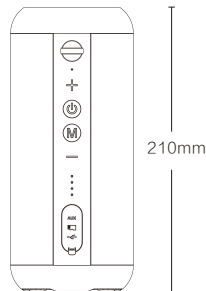 

Product Size:210×90×90mm

Product weight:910g (Including built-in Lithium battery)


Questions	Solutions
Can not connect	1, Restart the speaker
	2, if need passcode, enter 0000
Discontinuity	1, No more than 10M between the device and speaker
	2, No barrier between the device and speaker
Micro SD can not play	1, the Micro SD should be under FAT32 format
	2, the formats of music files should be WAV, MP3, WMA
No Sound when play	1, Check the volume's ajustment
	2, Check whether under pause or mute status
Can not power on	1, Check whether low battery
No response	1, System restoration : Long press the power button for 8 seconds




- ◆请阅读本说明。
- ◆请遵循本说明。
- ◆请在常温环境中存放和使用本产品。
- ◆请勿在近热源处使用本产品，如散热器、热风调节器、炉灶或其他产生热量的仪器（包括放大器）。
- ◆请勿堵塞音箱的开口处，勿将物体塞入音箱的通风口或槽隙中。
- ◆请勿丢掷，避免因跌落造成本产品损坏。
- ◆请使用音箱额定电压的电源充电器充电。
- ◆如果连接线与您的设备不匹配，请与销售商联系。
- ◆请将音箱调至合适音量，避免对您的听力造成损害。
- ◆无论设备因何原因损坏，都必须及时请专业维修人员修理，擅自拆卸将使保修失效。
- ◆如果电池更换不当会有爆炸危险，只能用同样类型或等效类型的电池来更换。
- ◆电池（电池包或者组合电池）不得暴露在诸如日照、火烤或类似过热环境中的警告。
- ◆消费者若使用电源适配器充电，则应购买配套使用获得CCC认证并满足标准要求的电源适配器。

10 包装清单

 简体中文

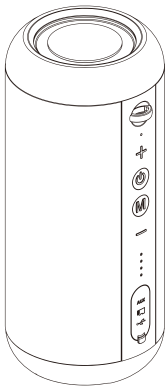


音箱主机 1台

 

Type-C充电线 1条



 
3.5mm音频线 1条

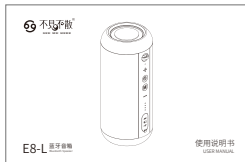

使用指南 1份




 挂绳 1条

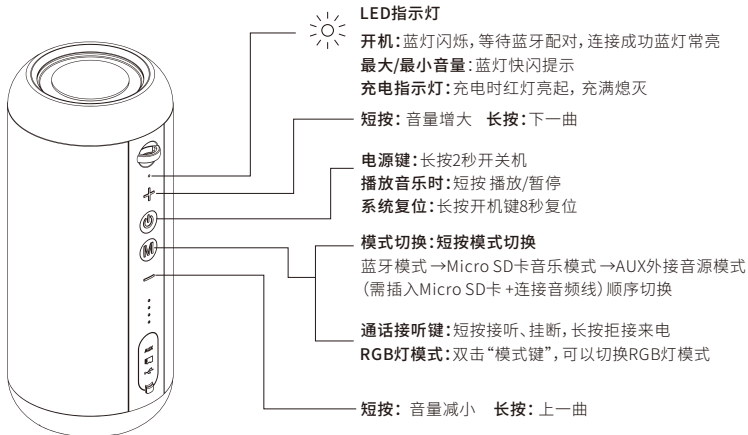**蓝牙断开:**

长按 (M) 按键断开与当前设备连接, 蓝牙返回等待连接状态;

 短按电源 (●) 可回连上一次连接的蓝牙设备

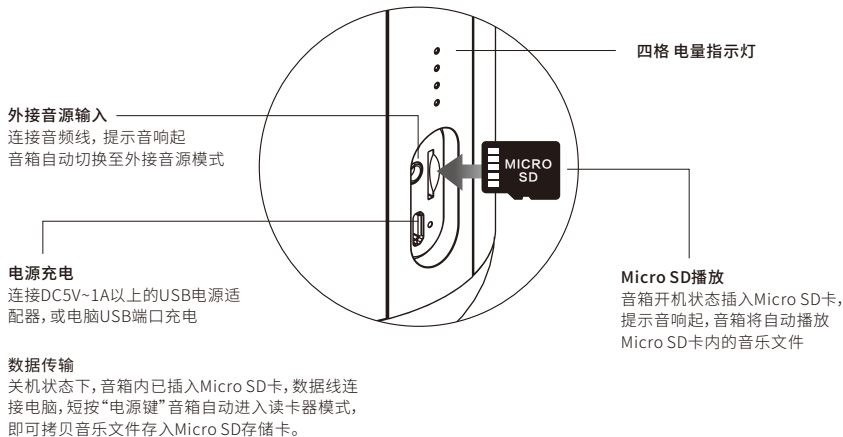

13 蓝牙音频连接

简体中文

 
1、音箱开机

 
长按电源键2秒开机，开机提示音响起后，接着提示音响起蓝灯闪烁，等待蓝牙配对。

2、连接到移动设备

开启移动设备蓝牙选项，在蓝牙设备列表中找到E8-L，连接成功您将听到提示音，同时LED指示蓝灯常亮。

后续使用中，只要保持移动设备的蓝牙开启，即可自动连接。

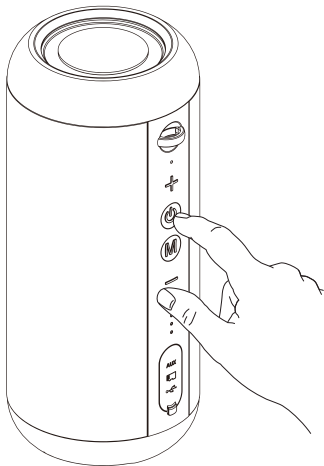



主音箱



从音箱

1、TWS连接操作

两台处于开机状态并且没有连接蓝牙的音箱，同时短按其中一台“+ -”键，提示音正在TWS配对，再次听到提示音后，两个音箱无线串联成功。

2、将串联音箱连接到移动设备播放

开启移动设备蓝牙选项，在蓝牙设备列表中找到 E8-L，连接成功您将听到提示音，同时LED指示蓝灯常亮。

3、TWS断开操作

已串联成功的两个音箱，同时短按其中一个音箱的“+ -”按键，可断开TWS连接。

其它说明：

01、首次两台音箱进行TWS串联，短按其中一台“+ -”键进入TWS串联的音箱为主音箱左声道，另一台为从音箱右声道。

02、TWS无线串联，仅支持2个音箱设备无线串联

03、TWS串联过后的两台音箱，会记忆之前的主从关系，两台音箱下次开机后会自动TWS串联。

04、TWS串联后，从音箱LED指示灯是长亮，由主音箱指示灯显示播放、暂停、和手机蓝牙连接等状态。


05、无线串联成功后，操作任意一音箱功能按键，另一音箱同步相应操作

15 技术参数


简体中文

基本参数	
音箱类型	蓝牙音箱
存储类型	支持容量不大于32G Micro SD卡
电源供应	内置3600mAh锂电池
	DC5V-1A的USB电源 充电约4小时左右
技术参数	
扬声器单元	2只 60mm外磁喇叭+ 2只65mm低频辐射器
输出功率	15W THD≤1%
频率响应	55Hz-18KHz
无线连接	Bluetooth 5.0
USB规格	USB2.0、兼容USB1.1
播放功能	
文件格式	MP3、WMA、WAV、APE、FLAC
	MP3:8Kbps-320Kbps
	WMA:32Kbps-384Kbps
	WAV:32Kbps-1414Kbps

 90mm

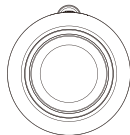

210mm

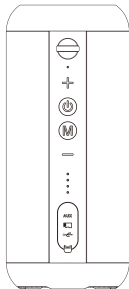 

产品规格:210×90×90mm

产品净重:910g(含内置锂电池)

故 障	解决方法
多次连接配对不成功	1、关闭音箱重新开机
	2、如果你的设备需要通行码，请输入0000
音乐播放出现断音	1、连接设备是否超出有效连接距离，或音箱同连接设备之间有障碍物
Micro SD卡出错 格式错误	1、检查Micro SD卡格式是否正确（音箱支持Micro SD卡格式为FAT32）
	2、Micro SD卡内文件是否为WAV、MP3、WMA
播放时无声	1、检查音箱音量是否有调节
	2、检查音箱是否处于静音或暂停状态
无法开机	1、音箱内置电池是否有电
操作无反应	1、音箱系统死机，长按开机键8秒复位



自助售后服务



不见不散公众号

生产企业：深圳市不见不散电子有限公司

地 址：深圳市宝安区航空路32号-不见不散视听创新园

电 话：0755-61181399 网 址：www.hb2099.com