

E9-L 蓝牙音箱
Bluetooth Speaker

使用说明书
USER MANUAL

Table of Contents

01 - 08 English

09 - 16 简体中文

17 产品售后服务条例

 
产品保修卡




- ◆ Please carefully read this user manual first.
- ◆ For the first use, a full follow is recommended.
- ◆ Please use and store the product at room temperature/normal atmospheric temperature.
- ◆ Do not throw and drop the product to avoid damages.
- ◆ Do not use this product near a heat source, such as radiators, heat regulators, stoves or other heat generating devices (including amplifiers) .
- ◆ Do not plug the opening of the speaker, do not plug the object into the speaker vent or slot
- ◆ Do not throw it to avoid the damage caused by falling.
- ◆ Please use charger with the rated voltage of the speaker charger.
- ◆ If the connector does not match your device, please contact the vendor.
- ◆ Please turn the speaker to the proper volume to avoid damage to your hearing.
- ◆ Regardless of any cause of the equipment damage, it must be repaired promptly by professional maintenance personnel, unauthorized dismantling will invalidate the warranty.
- ◆ If the battery is improperly replaced, there is a risk of explosion. Only the same or equivalent type of battery can be replaced.
- ◆ Warning that batteries (battery packs or battery packs) should not be exposed to conditions such as sunlight, fire, or similar overheating.

02 Packing Details


English

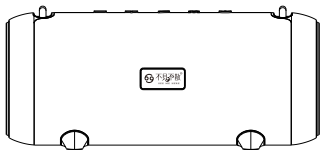

E9-L Speaker *1

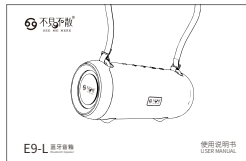 


User manual *1

 

USB Type-C Charging Cable *1



 3.5MM Audio cable *1

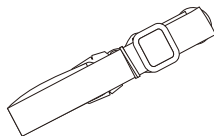

Sling line *1

03 Button Functions

English

Press: Volume down;

Press and hold: previous song

Note: Some settings on devices, apps and websites may require long press once for start of song then another long press for previous song

Press: Volume up;

 
Press and hold: next song

Power On button: Press and hold 2 seconds to power speaker on.

Short press to check battery level:

- 1) LED indicator blinking 4 times means 100% full battery;
- 2) LED indicator blinking 3 times means 75% battery;
- 3) LED indicator blinking 2 times means 50% battery;
- 4) LED indicator blinking 1 time means 25% battery.

Reset: Press and hold "Power" button for 8 – 10 seconds to reset

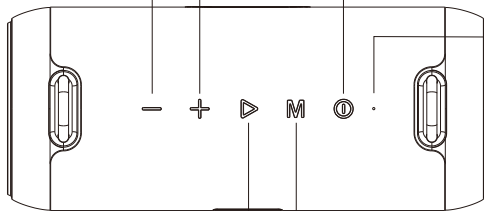

LED Indicators: Blinking blue LED, speaker awaiting Bluetooth connection; Solid blue LED, Bluetooth connection established or Micro SD/USB/AUX Mode; Slow blinking blue LED, music paused; Rapid blinking blue LED Max/Min Volume level reached; Red blinking LED, battery low

 
Playing music:

Press once to play/pause; Incoming call, short press to answer, long press to reject, and short press to hang up the call.

Mode Shift: Short press "M" button to switch Bluetooth/MicroSD (must have Micro SD card inserted)/USB Flash modes (must have USB Flash inserted)/AUX (must have AUX in cable connected); Long press "M" button to disconnect Bluetooth connection;
RGB lighting mode: Press "M" button twice (2X) to switch RGB

04 Port Function Indicators

English

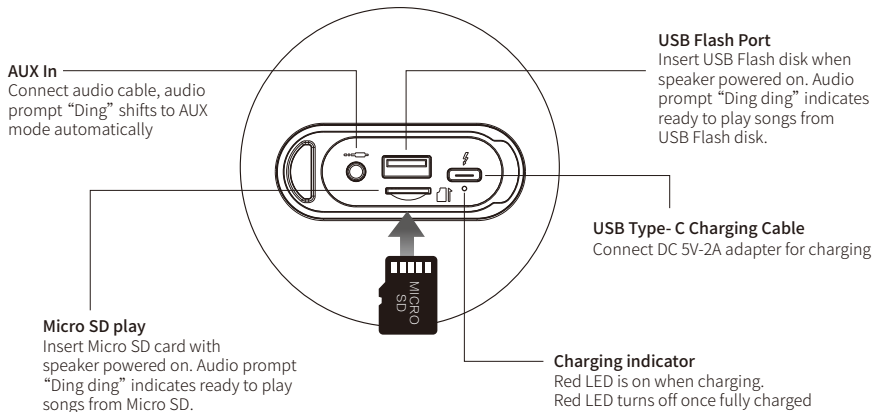

05 Bluetooth Connection

English

1.Power On

 
Press and hold “Power” button for 2 seconds. When you hear the audio prompt “Ding”, the blue LED will blink, indicating that the speaker is awaiting Bluetooth connection.

2.Connect to Bluetooth

Go to your device's Bluetooth list, find and connect to the device “E9-L”. Speaker is connected when you hear the audio prompt “Ding ding” and the blue LED remains lit.


The E9-L can reconnect automatically when Bluetooth is switched ON on the device.

Press and hold “M” button to disconnect current device and set E9-L into discoverable status; short press “Play” button to connect to last connected device.

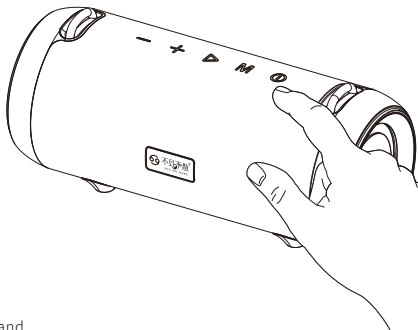


06 True Wireless Stereo Function

 English

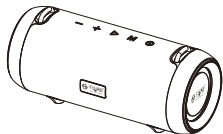

Master Speaker

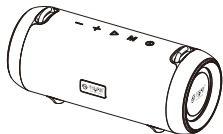 

Slave Speaker

1.TWS connection

Before starting, the speakers cannot be connected to any Bluetooth devices. Power on both E9-L speakers at the same time (both LED lights will be flashing). Choose one speaker and short press the “+” and “-” buttons at the same time. Once connected, the other E9-L LED light will stop blinking.

2.Let TWS Speakers connect to Bluetooth device

Go to the device's Bluetooth list, find “E9-L” to connect (if you see 2 E9-L on the list, the speakers are not in TWS mode) and the LED light will stop blinking.

3.TWS disconnect

On the E9-L, short press “+” and “-” buttons to disconnect the TWS



Tips:

- 01.Connecting two E9-L (TWS Mode) on the first one press “+” and “-”, this speaker will become the master speaker (left channel) and the other will become the slave speaker (right channel)
- 02.Only supports two speakers under TWS connection
- 03.Speakers will remember the TWS relationship (master/slave) when reconnected
- 04.Once TWS is connected, the slave speaker's LED will be ON and the master speaker's LED indicates the status of play, pause, Bluetooth connection, etc.
- 05.When TWS is connected the functions are the same on each E9-L speaker (synchronous functions)
- 06.When powering ON both E9-L speaker at the same time, if the LED is solid on one and other is blinking, the speakers are in TWS mode.

07 Technical Specifications

English

Basic	
Type	Bluetooth Speaker
Micro SD card	Supports up to 32GB
Power Supply	Built-in 4000mAh Li-ion battery
	DC5V/2A Type-C charging cable
Technical	
Trumpet	2 X 66mm trumpet 2 X 78mm X-bass radiator
Output	40W THD≤10%
Frequency Response	60Hz~18KHz
BT Version	Bluetooth 5.0
IPX	65
Music Files	MP3、WMA、WAV、APE、FLAC MP3:8Kbps-320Kbps WMA:32Kbps-384Kbps WAV:32Kbps-1414Kbps

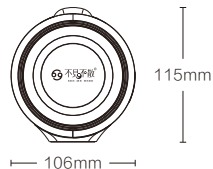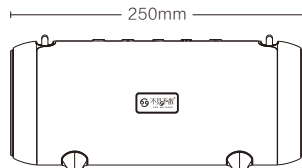  

Product Size: 250 × 106 × 115mm

Product weight: 1650g (Including built-in Lithium battery)


Questions	Solutions
Cannot connect	1.Restart the speaker
	2.If Passcode is required, enter 0000
Discontinuity	1.Ensure there is no more than 10M (30') between the device and speaker
	2.Ensure there are no barriers between the device and speaker
Micro SD cannot play	1.The Micro SD should be formatted as FAT32
	2.The formats of music files should be WAV, MP3, WMA, APE, FLAC
No sound when playing	1.Check the volume levels & adjust
	2.Check if paused or muted
Cannot power on	Check for low battery
No response	Reset the speaker (hold power button for 8 – 10 seconds)




- ◆请阅读本说明。
- ◆请遵循本说明。
- ◆请在常温环境中存放和使用本产品。
- ◆请勿在近热源处使用本产品，如散热器、热风调节器、炉灶或其他产生热量的仪器（包括放大器）。
- ◆请勿堵塞音箱的开口处，勿将物体塞入音箱的通风口或槽隙中。
- ◆请勿丢掷，避免因跌落造成本产品损坏。
- ◆请使用音箱额定电压的电源充电器充电。
- ◆如果连接线与您的设备不匹配，请与销售商联系。
- ◆请将音箱调至合适音量，避免对您的听力造成损害。
- ◆无论设备因何原因损坏，都必须及时请专业维修人员修理，擅自拆卸将使保修失效。
- ◆如果电池更换不当会有爆炸危险，只能用同样类型或等效类型的电池来更换。
- ◆禁止拆解、撞击、挤压或投入火中；若出现严重鼓胀，请勿继续使用；请勿置于高温环境中，电池浸水后禁止使用。
- ◆电池（电池包或组合电池）不得暴露在诸如日照、火烤或类似过热环境中。
- ◆消费者若使用电源适配器充电，则应购买配套使用获得CCC认证并满足标准要求的电源适配器。

10 包装清单

 
简体中文

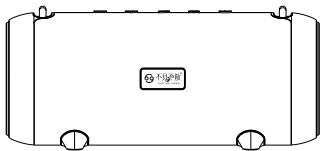

音箱主机 1台

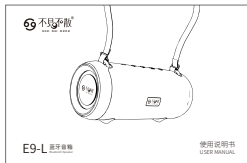 


使用指南 1份

 


Type-C充电线 1条



 3.5mm音频线 1条

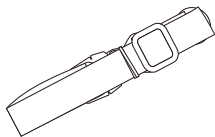


腰带 1条

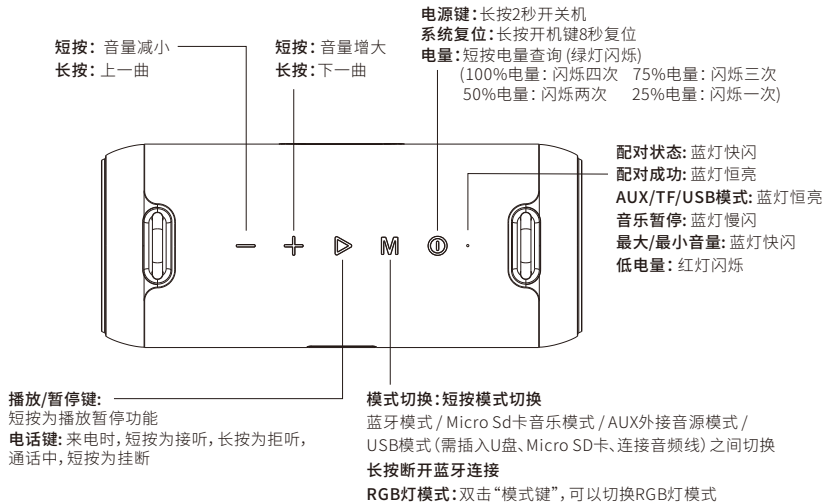 

12 接口功能指示

 简体中文

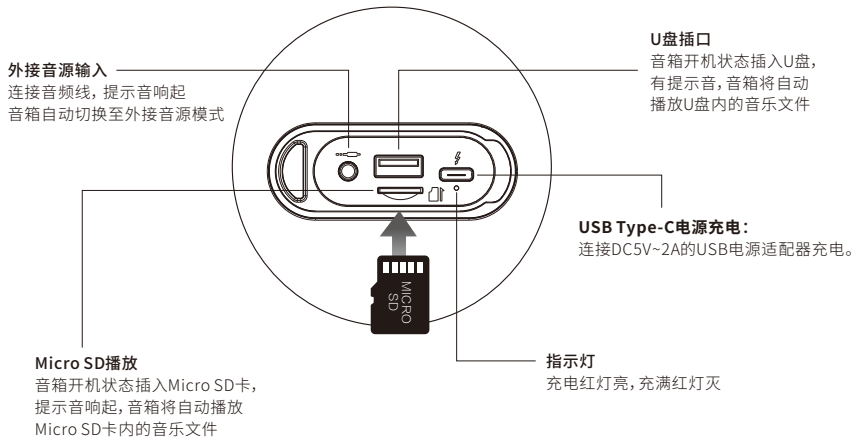

1、音箱开机

长按电源键2秒开机，开机提示音响起后，蓝灯闪烁，等待蓝牙配对。

 
2、连接到移动设备

 
开启移动设备蓝牙选项，在蓝牙设备列表中找到E9-L，连接成功您将听到提示音，同时蓝灯常亮。

后续使用中，只要保持移动设备的蓝牙开启，即可自动连接。


蓝牙断开：

长按 **M** 按键断开与当前设备连接，蓝牙返回等待连接状态；
短按 **▶** 可回连上一次连接的蓝牙设备

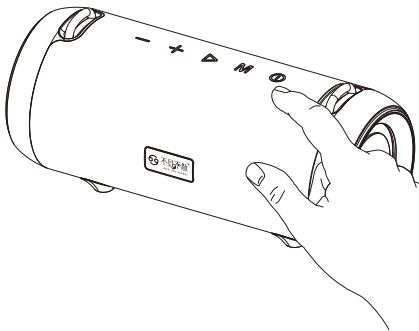

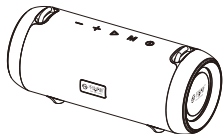

主音箱

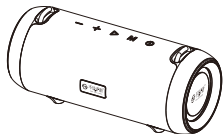 

从音箱

1、TWS连接操作

两台处于开机状态并且没有连接蓝牙的音箱，同时短按其中一台“+ -”键，提示音正在TWS配对，再次听到提示音后，两个音箱无线串联成功。

2、将串联音箱连接到移动设备播放

开启移动设备蓝牙选项，在蓝牙设备列表中找到 E9-L，连接成功您将听到提示音，同时蓝灯常亮。

3、TWS断开操作

已串联成功的两个音箱，同时短按其中一个音箱的“+ -”按键，可断开TWS连接。



其它说明：

- 01、首次两台音箱进行TWS串联，短按其中一台“+ -”键进入TWS串联的音箱为主音箱左声道，另一台为从音箱右声道。
- 02、TWS无线串联，仅支持2个音箱设备无线串联。
- 03、TWS串联过后的两台音箱，会记忆之前的主从关系，两台音箱下次开机后会自动TWS串联。
- 04、TWS串联后，从音箱蓝灯常亮，由主音箱指示灯显示播放、暂停、和手机蓝牙连接等状态。
- 05、无线串联成功后，操作任一音箱功能按键，另一音箱同步相应操作。

15 技术参数

简体中文

基本参数	
音箱类型	蓝牙音箱
存储类型	支持容量不大于32G Micro SD卡
电源供应	内置7.4V/4000mAh锂电池
	DC5V-2A的USB电源 充电约4小时左右
音频输入	蓝牙、USB、TF、AUX播放功能
技术参数	
扬声器单元	66mm 20芯外磁喇叭*2 + D78mm辐射器*2
输出功率	40W THD \leq 10%
频率响应	60Hz~18KHz
无线连接	Bluetooth 5.0
USB规格	USB2.0、兼容USB1.1
语音通话	支持双向通话功能
播放功能	
文件格式	MP3:8Kbps-320Kbps
	WMA:32Kbps-384Kbps
	WAV:32Kbps-1414Kbps

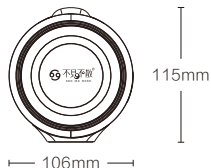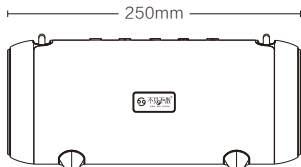  

产品规格:250×106×115mm

产品净重:1650g(含内置锂电池)

故 障	解决方法
多次连接配对不成功	1、关闭音箱重新开机
	2、如果你的设备需要通行码，请输入0000
音乐播放出现断音	1、连接设备是否超出有效连接距离，或音箱同连接设备之间有障碍物
Micro SD卡出错 格式错误	1、检查Micro SD卡格式是否正确（音箱支持Micro SD卡格式为FAT32）
	2、Micro SD卡内文件是否为APE、FLAC、WAV、WMA、MP3
播放时无声	1、检查音箱音量是否有调节
	2、检查音箱是否处于静音或暂停状态
AUX连接无声	检查是否将音频连接线正确接好
无法开机	音箱内置电池是否有电
操作无反应	音箱系统死机，长按开机键8秒复位



自助售后服务



不见不散公众号

生产企业:深圳市不见不散电子有限公司

地 址: 深圳市宝安区航空路32号-不见不散视听创新园

电 话: 0755-61181399 网 址: www.hb2099.com